
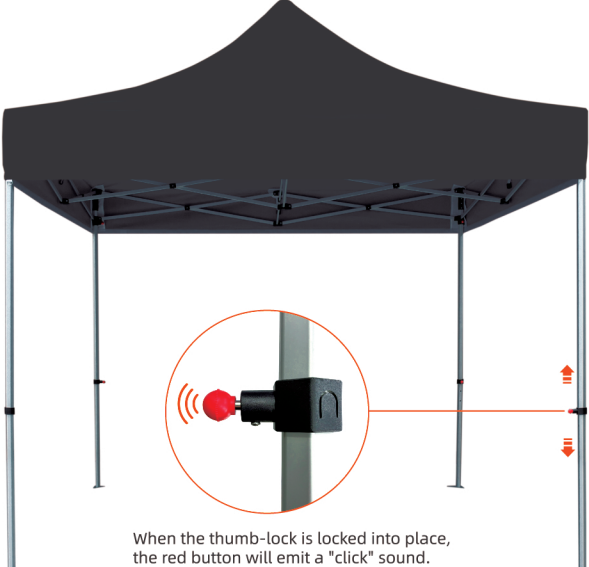
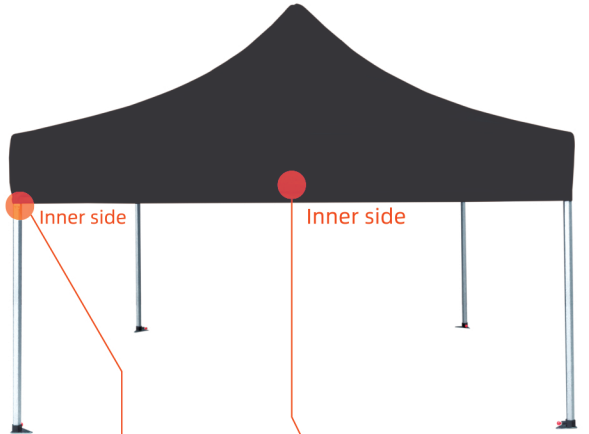
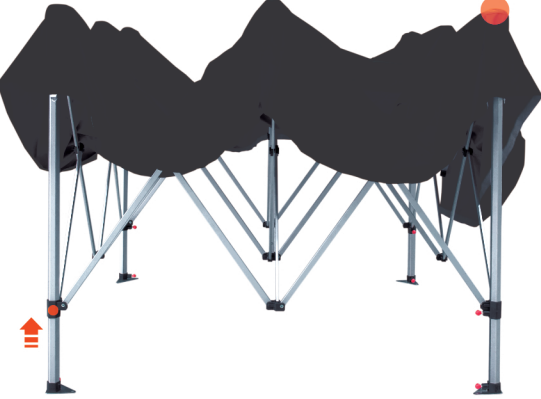
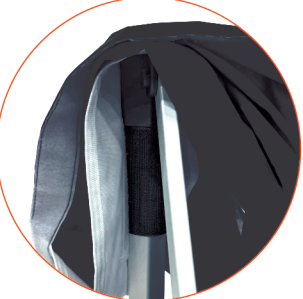


How to Set Up Your Tent

Applies to standard sized Hex Tube and Square Tube Advertising Tent

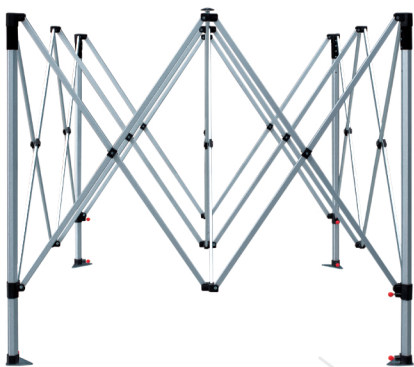

1 Two people stand opposite to each other and gently pull the frame until it is half open.

2 Put on the canopy to the frame by placing the top and four corners to the corresponding position.

3 Two people stand diagonal to each other. Lift and separate the frame legs to extent the tent out completely. Push the auto slider until the thumb lock clicks into place.

4 For height adjustment, stand on the foot of frame leg and slide the frame up until it locks into your desired position.

Tie canopy corners and frame corners down with the Velcro.

Inner side

Inner side




Fasten the canopy to the frame with the hook.

When the thumb-lock is locked into place, the red button will emit a "click" sound.

When the thumb-lock is locked into place, the red button will emit a "click" sound.

How to Set Up Your Half Wall

Applies to standard sized Hex Tube and Square Tube Advertising Tent

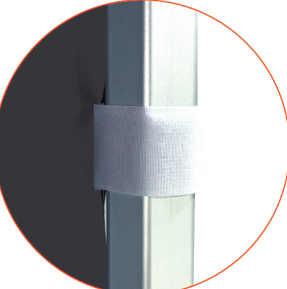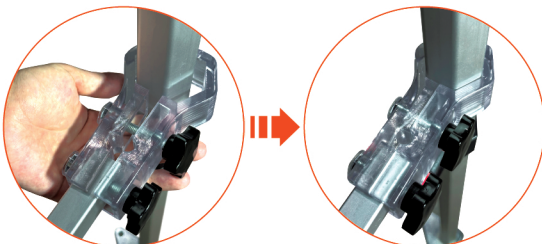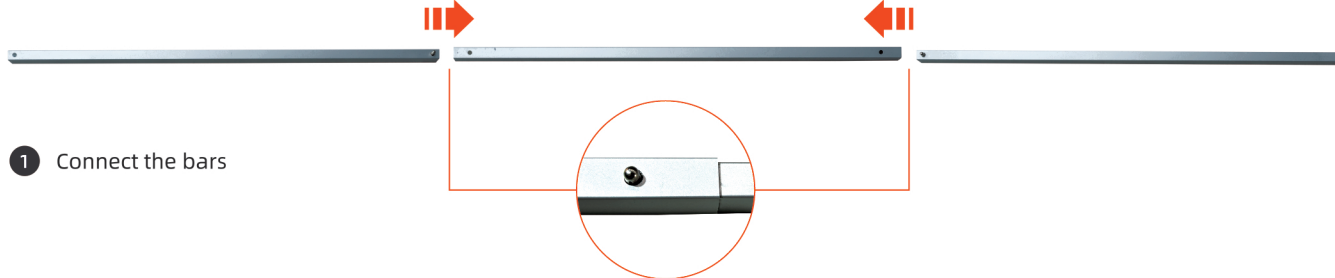

1 Connect the bars

2 Insert the bar to the half wall pocket

3 Secure the half wall to the tent legs

Secure the half wall to the tent legs with clamps

Fasten the graphic to the frame by Velcros straps